

How to restore ASIAIR SD card

If you want to run ASIAIR with a new SD card. The specific steps are as follows:


Part 1 Preparation

Step 1 Download, install the latest version of [Win32 Disk Imager](#).

Step 2 Download the ASIAIR system file **ASIAIR_V1.02.zip** from [Google Driver](#), and unzip the **ASIAIR_V1.02.zip**, make sure the remaining disk space is greater than 30GB.

Part 2 License file backup


Step 3 Back up the license file: **zwoair_license**, the file is on the **BOOT** partition.

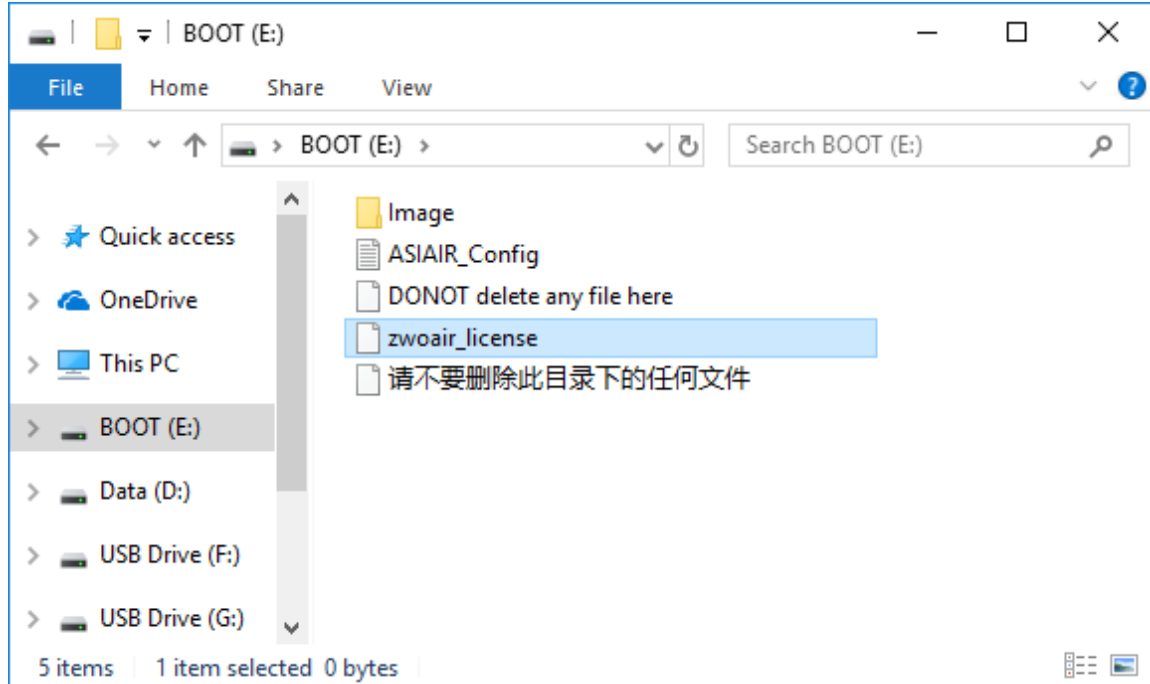


Note: If the SD card is damaged, please send the **SSID** of your ASIAIR to email support@zwoptical.com and we will generate a license file for you.


Part 3 Restore the ASIAIR system

Step 4 Insert the new SD card (32GB) into the card reader, then plug the card reader into the computer USB interface.

Step 5 Run the Win32 Disk Imager, click the folder icon () on its interface to select the image file that just unzipped in *Step 2*.

 Step 6 Under the **Device** label of the Win32 Disk Imager software interface, select the SD card drive letter.

Step 8 Click the Write button () to start. It would take 30 to 40 minutes typically.

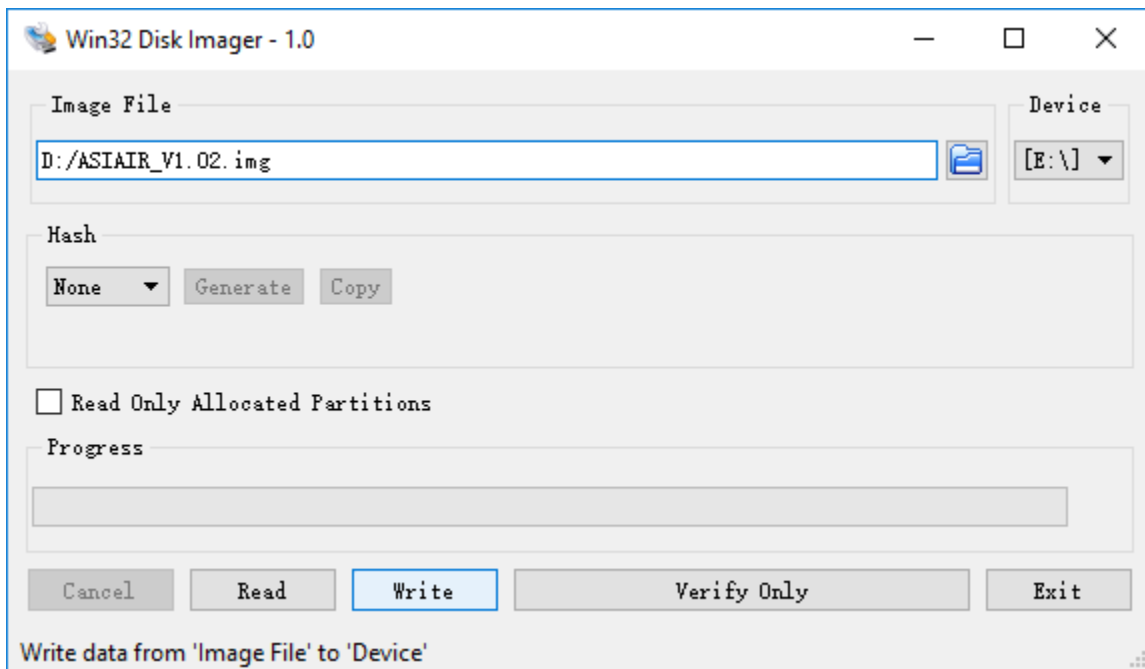

Step 9 Copy the license file that backed up in *Step 3* to the **BOOT** partition on the new SD card.