

# How to Use the iEXOS100 with ASIAIR

## #1 Switch the controlling interface


Follow the below document to change the interface from the default WiFi Port (interface 1) to the Serial Port (interface 0)

[Explore Scientific PMC-Eight® Application Note PMC8-AN003: Switching Between the WiFi Interface and the Serial Interface on the iEXOS 100™ Mount Controller](#)

## #2 Connect to the ASIAIR

1. Power on the ASIAIR & iEXOS-100 (in the Park Position - this is with the scope pointing towards the pole and the counterweight straight down)
2. Connect the iEXOS-100 to ASIAIR via a USB cable (Need to buy separately, refer to the above document Page.3)
3. Open the ASIAIR app, go to the Telescope Settings page, choose [Explore Scientific iEXOS100] in the drop-list then tap the right switch to connect

## #3 A screenshot of the ASIAIR app

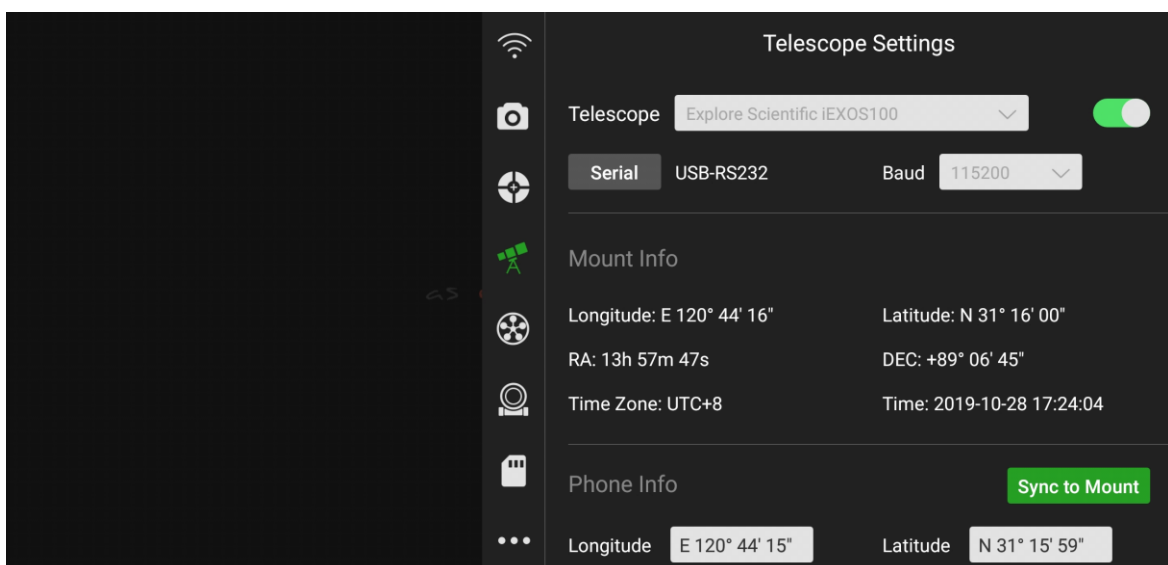

Note: The Serial: USB-RS232 and the Baud: 115200 should be shown before connecting.